

SCK GND

 
TP44 TP45 R40 TP48

3V3 TP40 PWDN

SDA TP46 SCL0 47 Cam_VDD

USB_ON/OFF

CLK2 DAT2



TP49 SD_VDD

SD 2.0

RST2 VDD2

CARD1

- Q2 R8
- Q1 R9
- Q3 R7
- Q4 R4
- R20 D5
- R21 R22 D6
- C18 C17 C15
- C13
- R10
- DAT3 TP8
- R16
- DAT2 TP22
- R12
- DAT1 TP12
- DAT0 TP11
- CLK TP10
- CMD TP9
- VDD TP13

R63 R60



U11

C72 C71

C70 C69

U8

R57 R59


C68 C67

U8

R56 R58

SIM1

- VDD TP14
- DAT TP18
- CLK TP16
- RST TP15

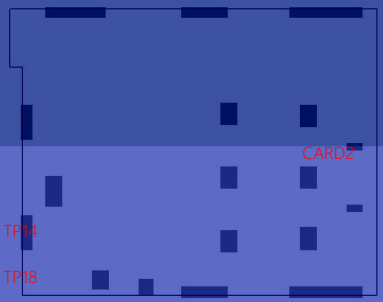

CARD2

C62

R50

Q8

Q6

Q7

C25 L3
C30 L5

C26
C31

C28
C27 R3
C34 R3 R34

C24 C32
C29 C33

C6 C7 C5
C53 C55
C8 C52

U16